



1. Foundation depth is depended on local earth condition by user.

## FOUNDATION INSTALLATION